

User USB software update

- Download the file to the PC.
 - Unpack the *.zip file, you will get the *.bin file(s).
 - Copy the *.bin file(s) to the root folder of the USB stick.
- The flash drive must be formatted in FAT32 and can not contain any other file.*

- Turn on the TV.
- Insert the USB stick into the USB input of the TV.
- Press MENU button on the remote control to get to the main menu.
- Press ► and go to SETTINGS option and press OK. **(picture 1)**
- Press ► and go to SETUP option and press OK. **(pic. 2)**
- Press ▼ and choose Software Update (USB) option and press OK. **(pic.3)**
- You will get a prompt message, confirm with YES **(pic. 4)**.
- Wait until the memory update is completed.

DO NOT TURN OFF THE TV DURING THIS PROCESS!

- After successful update the TV turns ON.
- After automatic TV start, please remove USB from TV

NOTE: Make sure you do not leave USB with upgrade file in your TV after successful software upgrade! If you wish to use your USB storage device for other TV functions, please first delete upgrade file from it via PC/Laptop.

